

Instructions For Use

·English

UNIVERSAL A/C REMOTE CONTROL

Default Function




Our product is available for: GREE (YBOF2), Mitsubishi 388, Midea, Toshiba, Chunlan, Haier, Hualing etc. If it's not working, please try to operate it with one of the methods below:

Setting Of The Remote Control

A> Brand point to point fast searching

1. Switch on the power of the air condition manually, align the remote control with the receiving window of the air condition.
2. Long press the CODE button until the air condition begins to automatically run with a voice of tick, and then release the button, and the setup is finished.

Button Brand Corresponding Table

 ON/OFF	 TEMP+	 TEMP-	 WIND
GREE/ HAIER	MIDEA/ TOSHIBA/ CHANGHONG	SHARP/ KELON	MITSUBISHI/ OTHERS
 MODE	 M.SWING	 A.SWING	TIME ON
LG/ SAMSUNG	HITACHI/ PANASONIC	SANYO/ HISENSE	CHIGO/ DAIKIN
TIME OFF	F.Cool FAST COOLING	F.Heat FAST HEATING	
FUJITSU/ CARRIER	CHUNLAN/ AUX	SHINCO/ AUCMA	

B> Digital auto searching for the available type

1. Switch on the power of the air condition manually, align the remote control with the receiving window of the air condition.
2. Press and hold the "SET" button for 6 seconds until the type code has changed (+1), now it's in the mode of fast searching for the available type. Checking the status of your air condition and press "OK" button to finish the searching when the air condition starts automatically.
3. Check the function of the buttons whether working or not (except the TEMP+, TEMP-, TIME ON, TIME OFF, SET buttons). Press the "OK" button to finish if there is no problem and the code is effective, if not, press "SET" button to keep on searching.


C> Input the code manually

1. Switch on the power of the air condition manually, find out the type of your air condition and the first code from the code table. Take HAIER as an example.
2. Press and hold the "SET" button for about 3 seconds until the type code is flickering in the window, then press "TEMP+" button until the code you need is on the window and flickering, the air condition will start up if the code is right.
3. Press "OK" button and then the code of the type will stop flickering.
4. Check the function of the buttons on the remote control to make sure there is no problem. The setup is finished if there is no problem. If not, repeat the step 2-3.

D> Searching the code manually

1. Switch on the power of the air condition manually, align the remote control with the receiving window of the air condition.
2. Press and hold the "SET" button for about 3 seconds until the type code is flickering in the window, then press "TEMP+" button one time. Checking the status of your air condition and press "OK" button to finish the searching when the air condition starts automatically.

Restore to factory settings

Press the "SET" + "WIND"  button at the same time and hold about 3 seconds to restore to factory settings.

Some of the remote control have the functions below (refer to the panel of the remote control)

1. FAST COOLING, FAST HEATING button

The air condition will be set to the cooling mode by pressing the "FAST COOL" button, the temperature is 21°C, strong wind, automatic direction.

The air condition will be set to the heating mode by pressing the "FAST HEAT" button, the temperature is 27°C, strong wind, automatic direction.

* In the mode of heating, press the "E A Heating" button to start the electrical heating function. This function is suitable for some models.

2. Set the CLOCK function

Press the "CLOCK" button (about 3 seconds) to get in the mode of clock setting and then the clock is flickering, adjust the time by pressing the "TEMP+" button and the "TEMP-" button. Press the "CLOCK" button again to exit.

3. TIME ON/OFF function

Equipped with the original remote control timing function, the timing indicator light of the air condition will light up after pressing the "TIME ON" or "TIME OFF" button, and it means that the air condition is working in the timing status.

Note:

The combination code has no timing function when it is switched on, please find the appropriate type according to the set-method (one of the A B C D) in the Instruction Manual.

* The TIME ON function of some types is only available in the shutdown mode.

CABOL EMATIC



CABOL EMATIC

CODE

ACSOM 980
 ADC 861
 AIDELONG 293-295
 AITE 296-299
 AKIRA 796-797
 ALPIN 989-991,998
 AMCOR 501,508,509,532,
 973,978,979
 AMICO 982
 AOKE 301-302
 AOLI 300
 APTON 862
 AUCMA 210-229,933
 AUX 180-199
 BAIXUE 299
 BEIJINGJINGDIAN 304
 BIG-THUMB 331
 BLUE STAR 057,550,887
 BOERKA 630,305-306
 BORLER 307
 BOSHI 310
 BOSHIGAO 308-309
 CAIXING 311
 CARRIER 599,690-699,890-
 899
 CHANGFENG 190
 CHANGFU 835-838
 CHANGHONG 059-079,934,947
 CHANGLING 312-323
 CHENGYUAN 324
 CHIGO 080-099
 CHUANGHUA 325-328
 CHUANYAN 861
 CHUNLAN 170-179
 COLROLLA 861
 CONROWA 337-341
 CONSUL 993
 CORONA 760-769
 CROWN 861
 DAEWOO 332-333
 DAIKIN 740-759
 DAJINXING 329-330
 DAKE 861
 DAOTIAN 821-824
 DELONGHI 900
 DIY 044,090,092,095
 DONGXIA 334-335
 DONGXINBAO 260-268
 DUNAN 336
 ELCO 982
 ELECTER 981-986
 ELECTROLUX 471-474,807-
 808,250,906
 FEDDERS 878
 FEIEDRICH 879
 FEIGE 829-830
 FEILU 240-249
 FERROLI 901
 FIRST 864
 FRESTECH 270-279,944-945
 FUJITSU 700-719
 FUNIKI 992
 GALANZ 124-129,134-
 139,936-940
 GEER 342-343
 GLEE 280
 GOLDSTAR 303
 GREE 000,020-039
 GUANGDA 345-346
 GUQIAO 344
 HAIER 001-019
 HELTON 863
 HEMILTON 095
 HICON 391-392
 HISENSE 230-239
 HITACHI 640-659
 HONGYI 347
 HUABAO 100-109
 HUAGAO 348
 HUAKE 349-350
 HUALING 150-169,045
 HUAMEI 351-352
 HUANGHE 353
 HUAWEI 281
 HUIFENG 354-356,357,360
 HYUNDAI 780-789
 INYCIN 475-483
 JIALE 358
 JIANGNAN 359
 JINBEIJING 361-362
 JINDA 491-492
 JINSONG 363-365
 JMSTAR 360
 JOHNISO 282
 KANGLI 368-370
 KELONG 110-119
 KLIMATAIR 797-800
 KONKA 366-367
 KRIS 804-805
 KT02_D001 283
 KT02_D002 284
 KTY001 285
 KTY002 286
 KTY003 287

KTY004 288
 KTY005 289
 LG 600-609
 LIANGYU 780
 LIKEAIR 386-387
 LITTLESWAN 453
 LONGHE 861
 LOREN-SEBO 801-803
 MCQUAY 790-795
 MEILING 388-391
 MIDEA 040-058
 MINGXING,BOYIN 290
 MITSUBISHI 551-599
 MITSUKA 904
 NATIONAL/Panasonic 660-689
 NIKKO 810-811
 NISO 398-399,497
 NORCA 994
 OGENERAL 659,717,718,719
 OLYMPUS 995-996
 OPAL 997
 PANDA 464-466
 PEREG 998
 PILOT 902
 PINSHANG,XINHUABAO 290
 PUYI 862
 QIXING 393
 RAYBO 371-383
 RHOSS 903
 RICAI 394
 RIJIANG 395-397
 ROWA 383-385
 SACON 414
 SAMSUNG 610-629
 SANYONEC 500-550,860,943,946
 SANZUAN 190
 SAPORO 861
 SAST 450-452
 SENSOR 860
 SERENE 499
 SHAMEI 400
 SHANGLING 403-409
 SHANXING 401-402
 SHANYE 862
 SHARP 720-739
 SHENBAO 410-411
 SHENGFENG 412
 SHENGFENG\FEILU 413
 SHINCO 200-209
 SHINING 415
 SHUANGLU 416-418,946
 SIGMA 447
 SOGO 291
 SONGLINXIA 862
 SONGXING 419
 SOVA 292,420
 SOWA 862-863
 SOYEA 421-422
 SPEED 987
 SRTC 423
 STARIGHT-AIRCON 880
 SUNBURG 817-820
 TADIAIR 501,508,509,532
 TADIRAN 501,508,509,532,630,
 969,978,979,991
 TAIYA 862
 TCL 120-133
 TEAC 850-859
 TECO 831-834
 TIANJINKONGTIAO 424
 TIANYUAN 425-428
 TOBO 250-269
 TONGLI 429-430
 TOSHIBA 630-639
 TOTALINE 548
 TOYO 825-828
 TRANE 812-816
 UNI-AIR 368-369
 UTTLEDDUCK 454-456
 VIDEOCON 597,627,628,629,884
 VOLTAS 056,057,549,598,609,
 627,628,629
 WANBAO 431-433
 WANGZI 861
 WEILI 434-443,553-576
 WEITELI 444
 WHIRLPOOL 119,550,770-774,739
 WUFENG 445-446
 XILENG 448-449
 XINGHE 462-463
 XINLE 457-460
 XINLING 461
 XIONGDI 862
 YAIR 467-471,044,013-015
 YAOMA 470
 YIDONG 499
 YORK 775-779
 YUETU 949
 YUTU 484-490
 ZHONGYI 493-494
 ZUODAN 495
 OTHER 496,498,821-828,839-
 849,865-877,905-976,
 999



Cablematic

Cablematic

